

Yaesu FT-991 Key Press Sequences

Contents

Yaesu FT-991 Key Press Sequences.....	1
Revision History.....	1
Resetting Memories.....	1
Menu Resetting.....	1
Full Reset.....	1
Service Menu.....	2
Check Firmware Versions.....	2
DSP Firmware Update.....	2
TFT Firmware Update.....	2

Revision History

Version 1_14122015 *Original*

Version 2_01012016 *Corrected key press sequence for full reset and sequence for checking firmware versions*

Resetting Memories

Press and hold [A>M] button, then press [POWER] and hold.

Menu Resetting

Press and hold [MENU(SETUP)] button, then press [POWER] and hold.

Full Reset

Press and hold [FAST] + [LOCK] buttons, then press [POWER] and hold.

Service Menu

To access the service menu, press and hold [A=B] + [A/B] + [FAST] buttons, then press [POWER] and hold.

Check Firmware Versions

Press and hold [A=B] + [A/B] buttons, then press [POWER] and hold.

DSP Firmware Update

1. Power off FT-991. Remove all cables.
2. Plug in USB cable and power cable.
3. Turn power supply on.
4. Press and hold [F(M-LIST)] + [MENU(SETUP)] + [BAND] then press [POWER] and hold. Green indicator light under MEM turns on. Release buttons.
5. Execute firmware update software.
6. Press [POWER] button, turning the FT-991 off.

TFT Firmware Update

1. Power off FT-991. Remove all cables.
2. Plug in USB cable and power cable.
3. Turn power supply on.
4. Press and hold [F(M-LIST)] + [BAND] + [MODE] then press [POWER] and hold. Red indicator light under VFO-A turns on. Release buttons.
5. Execute firmware update software.
6. Press [POWER] button, turning the FT-991 off.